


## HOW TO OPERATE

### The Architectural Modular Series consists of 3 components:

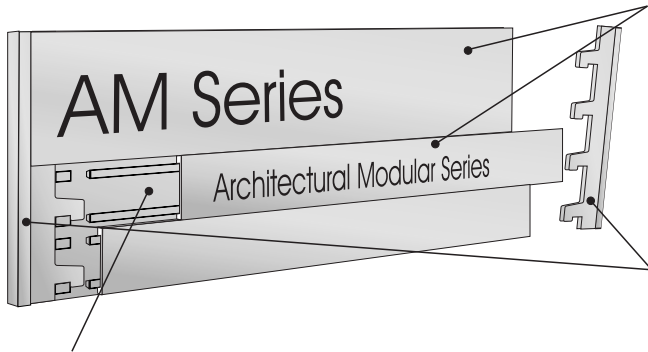

#### Inserts

Inserts - your graphics or copy is applied to the Inserts. Simply choose the size and quantity of inserts you require for each sign. For sizes, please refer to the Size Chart in our AM Series Brochure.

#### Sidelocks


Sidelocks come in pairs and are the locking mechanism that secures the contents of the sign. All signs require Sidelocks, there is one on the left and one on the right.

#### Base Plate


The Base is the backing plate section of the sign. This component is mounted directly to the wall or door.

There are 3 profiles available: (Standard) 1/16", 1/4" and 1/2". The 1/4" and 1/2" sizes are available with corners square cut or radius cut options.


### Architectural Modular Series is an interchangeable system with countless layout and configuration possibilities

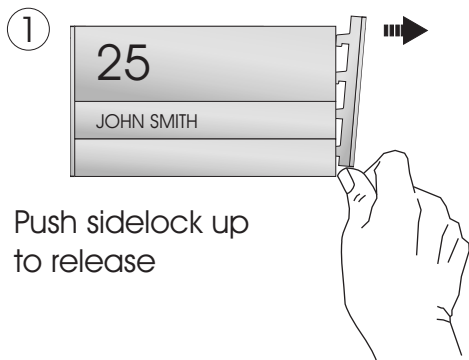


1 Push sidelock up to release

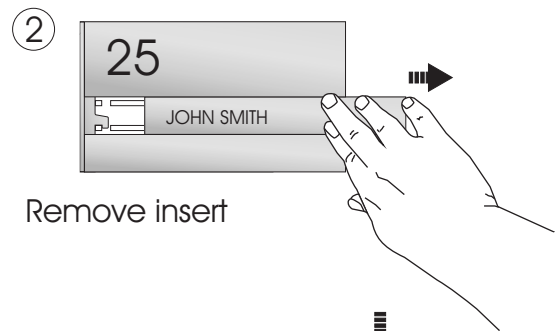

2 Remove insert

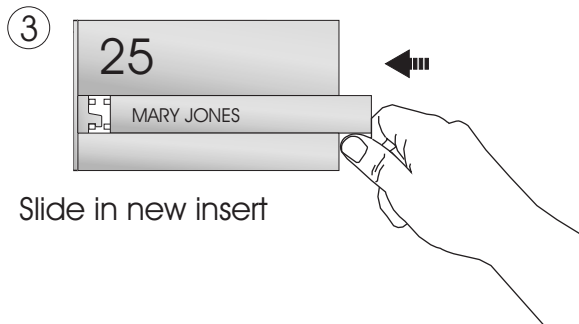

3 Slide in new insert

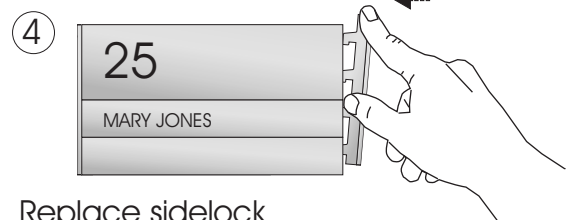

4 Replace sidelock

**Simple to use, changeover of inserts is quick and easy.**